

## **IC70-series Panel PC**

Intel® i5/i7 800/1066 MHz Mini-ITX SBC,  
High Performance Design with Intel  
HM55 Platform, CRT/LCD/TV and  
versatile expansions.

**User Guide Version 1.0**

## ***FCC Statement***



This device complies with part 15 FCC rules. Operation is subject to the following two conditions :

- This device may not cause harmful interference.
- This device must accept any interference received including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a class "a" digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at him own expense.

### **Copyright Notice**

ALL RIGHTS RESERVED. No part of this document may be reproduced, copied, translated, or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the prior written permission of the original manufacturer.

### **Trademark Acknowledgement**

Brand and product names are trademarks or registered trademarks of their respective owners.

### **Disclaimer**

We reserve the right to make changes, without notice, to any product, including circuits and/or software described or contained in this manual in order to improve design and/or performance. We Communication assumes no responsibility or liability for the use of the described product(s), conveys no license or title under any patent, copyright, or masks work rights to these products, and makes no representations or warranties that these products are free from patent, copyright, or mask work right infringement, unless otherwise specified. Applications that are described in this manual are for illustration purposes only. We Communication Inc. makes no representation or warranty that such application will be suitable for the specified use without further testing or modification.

### **Warranty**

We warrant that each of its products will be free from material and workmanship defects for a period of one year from the invoice date. If the customer discovers a defect, We will, at its option, repair or replace the defective product at no charge to the customer, provided it is returned during the warranty period of one year, with transportation charges prepaid. The returned product must be properly packaged in its original packaging to obtain warranty service.

If the serial number and the product shipping data differ by over 30 days, the in-warranty service will be made according to the shipping date. In the serial numbers the third and fourth two digits give the year of manufacture, and the fifth digit means the month (e. g., with A for October, B for November and C for December).

For example, the serial number 1W07Axxxxxxx means October of year 2007.

## **Check List**

Before using this Panel PC, please make sure that all the items listed below are present in your package

- 1 x IC70 series Panel PC
- 1 x IC70 series Panel PC User Guide
- 1 x IC70 SBC User Manual
- 1 x Power adapter
- 1 x CD-ROM disc with Driver Utility and User's Manual

Make sure that all of the items listed above are present. Do not attempt to apply power to the system if there is damage to any of its components.

## **Customer Service**

We provide service guide for any problem as follow steps : First, visit the website at <http://www.we.com> to find the update information about the product. Second, contact with your distributor, sales representative, or our customer service center for technical support if you need additional assistance. You may have the following information ready before you call :

- Product serial number
- Peripheral attachments
- Software (OS, version, application software, etc.)
- Description of complete problem
- The exact wording of any error messages

In addition, free technical support is available from our engineers every business day. We are always ready to give advice on application requirements or specific information on the installation and operation of any of our products. Please do not hesitate to call or e-mail us.

## **Notice**

1. Do not touch the LCD panel surface with sharp or hard objects.
2. Do not use abrasive cleaners, waxes or solvents for cleaning, use only a dry or damp, soft cloth.
3. Use only with a high quality, safety-approved, AC/DC power adapter.

## ***Safety Precautions***

### **◆ Warning!**



Always completely disconnect the power cord from your chassis whenever you work with the hardware. Do not make connections while the power is on. Sensitive electronic components can be damaged by sudden power surges. Only experienced electronics personnel should open the PC chassis.

### **◆ Caution!**



Always ground yourself to remove any static charge before touching the CPU card. Modern electronic devices are very sensitive to static electric charges. As a safety precaution, use a grounding wrist strap at all times. Place all electronic components in a static-dissipative surface or static-shielded bag when they are not in the chassis.

## ***Safety and Warranty***

1. Please read these safety instructions carefully.
2. Please keep this user's manual for later reference.
3. Please disconnect this equipment from any AC outlet before cleaning. Do not use liquid or spray detergents for cleaning. Use a damp cloth.
4. For pluggable equipment, the power outlet must be installed near the equipment and must be easily accessible.
5. Keep this equipment away from humidity.
6. Put this equipment on a reliable surface during installation. Dropping it or letting it fall could cause damage.
7. The openings on the enclosure are for air convection. Protect the equipment from overheating. **DO NOT COVER THE OPENINGS.**
8. Make sure the voltage of the power source is correct before connecting the equipment to the power outlet.
9. Position the power cord so that people cannot step on it. Do not place anything over the power cord.
10. All cautions and warnings on the equipment should be noted.
11. If the equipment is not used for a long time, disconnect it from the power source to avoid damage by transient over-voltage.
12. Never pour any liquid into an opening. This could cause fire or electrical shock.
13. Never open the equipment. For safety reasons, only qualified service personnel should open the equipment.
14. If any of the following situations arises, get the equipment checked by service personnel:
  - A. The power cord or plug is damaged.
  - B. Liquid has penetrated into the equipment.
  - C. The equipment has been exposed to moisture.
  - D. The equipment does not work well, or you cannot get it to work according to the user's manual.
  - E. The equipment has been dropped and damaged.
  - F. The equipment has obvious signs of breakage.
15. Do not leave this equipment in an uncontrolled environment where the storage temperature is below -20° C (-4°F) or above 60° C (140° F). It may damage the equipment.

### ***Revision History***

<b>Version</b>	<b>Date</b>	<b>Note</b>	<b>Author</b>
1.0	2011.08.16	✓ First Version	Henry Hsu

# Contents

<b>CHAPTER 1 GENERAL INFORMATION .....</b>	<b>1</b>
1-1 Introduction.....	1
1-2 IC70 series Panel PC System Specifications .....	2
1-3 LCD Selection Guide.....	3
<b>CHAPTER 2 GETTING STARTED.....</b>	<b>4</b>
2-1 Input / Output Devices.....	4
2-2 Starting the Panel PC& O/S Installation.....	5
2-3 Driver Installation.....	5
<b>CHAPTER 3 TOUCH DRIVER INSTALLATION.....</b>	<b>6</b>
3-1 Introduction.....	6
3-2 The ELO AccuTouch Driver Installation.....	7
3-2-1 Configuration Utility .....	8
3-3 The Premier Touch Driver Installation .....	10
3-3-1 Configuration Utility .....	11
<b>CHAPTER 4 IC70 SERIES PANEL PC MOUNTING GUIDE .....</b>	<b>13</b>
4-1 Open Frame Panel PC:.....	13
4-2 5mm Panel Mount Panel PC: .....	15
4-3 10mm IP65 Panel PC.....	17
4-4 Chassis Panel PC .....	19



# Chapter 1 GENERAL INFORMATION

## 1-1 Introduction

The IC70 series Panel PC is high performance PC with Intel® HM55 chipset which combines with a TFT LCD Panel. The Intel® i5/i7 high performance Processor delivers the most performance per watt available in the market. The Panel PC is designed to satisfy most of the applications in the industrial market, such as **POS, KIOSK, Industrial Automation, HMI and Programmable Control System**. It's a PC-based system with DDR3 SDRAM, VGA/LCD controller, one RS232 brings power among four COM ports, also a SATA with +5V power, on-board 10/100/1000 Mbps Base-T Ethernet. The Panel PC supports PCI-Ex16/ Mini-PCIe expansion slots for Wireless, Ethernet, COM port, Graphic card and TV functions. It is a flexible and versatile design over the demanding performance requirements of today's business and industrial applications.



## 1-2 IC70 series Panel PC System Specifications

Form Factor	Mini-ITX
CPU	Intel® i5/i7 800/1066 MHz Processor
Chipset	HM55
Memory	DDR3 1066/800MHz SO-DIMM x 2 Slot (MAX 8GB)
BIOS	AMI UEFI BIOS
Graphic Controller	Integrated Gfx Gen5.75
VGA	Up to 2048 x 1536 @ 75Hz
LVDS	Dual-channel 18/24-bit LVDS Up to 1600 x 1200 @ 60Hz
Ethernet	Dual Broadcom BCM57780 GbE controller
Audio	Realtek ALC886 HD Audio Codec
Serial	2 x RS-232
Serial	1x RS-232/422/485 (Default RS232)
USB	4 x USB
PS/2	2 x PS/2 for Keyboard and Mouse
Power Input	Din 4P 12V DC in
O/S(Optional)	Windows7 Embedded / Windows XP Embedded / Windows XP Professional / Linux

### 1-3 LCD Selection Guide

 
The IC70 series Panel PCs support from 10.4-inch to 15-inch TFT Panel w/ touchscreen function, please refer the below:

Item Size		Resolution (Recommended)	Display Color
15"	R15IC7T-XXC3	1024 x 768	16.2M colors (RGB 8-bits).
15"	R15IC7T-XXA1	1024 x 768	16.2M colors (RGB 8-bits).
17"	R17IC7T-XXM1	1280 x 1024	16.7M (6bits+FRC)
19"	R19IC7T-XXM1	1280 x 1024	16.7M colors (8bits)
20.1"	R20IC7T-XXA2	1600 x 1200	16.7M colors (8bits)
21.5"	W22IC7T-XXA1	1920 x 1080	16.7M colors (8bits)

## Chapter 2 Getting Started

### 2-1 Input / Output Devices

The following figure shows the I/O arrangement of the Panel PC. The backside of the chassis contains most of the connectors.

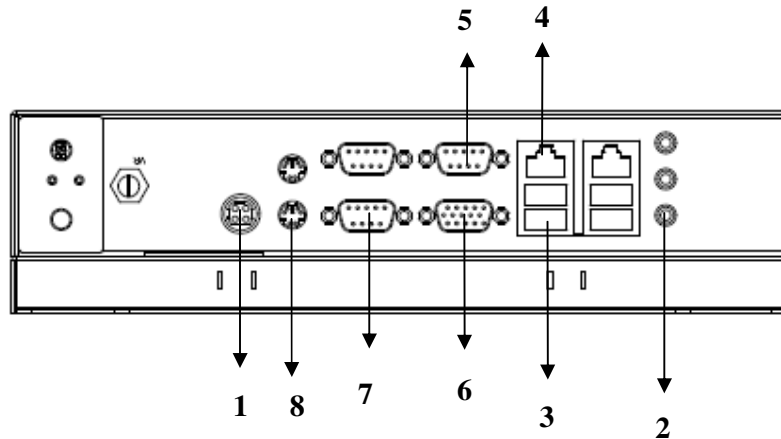


1	Power On / Off / Reset	Power on/off and Reset the power on your computer.
2	Audio	Audio Jack for Audio (Line-Out, Line-In, Mic-in)
3	USB port	USB-compatible devices can be plugged directly into the USB 2.0 port.
4	RJ-45 port	Connect a network cable to the standard RJ-45 port and get connection to the Local Area Network (LAN).
5	COM port	One optional COM port supports RS232/422/485 choice through jumper setting. COM 1 Provides +5V & +12V output options by JP1 Jumper setting.
6	VGA port	Use VGA port to connect an external Display.
7	COM port	Two RS-232 connectors build in the rear I/O.
8	PS/2	The Motherboard provides two PS/2 interface. The PS/2 connector supports Keyboard (Green) and Mouse.

## 2-2 Starting the Panel PC& O/S Installation

 1. Connect the power to AC/DC adapter, and connect the power cord to the AC outlet.
2. Press the power on switch to start the Panel PC.
3. Press “DEL” to enter the CMOS setting and check the BIOS setup.
4. You may install your own O/S if it is not installed.

When installing O/S for this Panel PC, please follow the steps and use external equipment as **Keyboard and Mouse.**

- (a) Please use external USB DVD-ROM to run the O/S and Driver setting (as picture showed below).

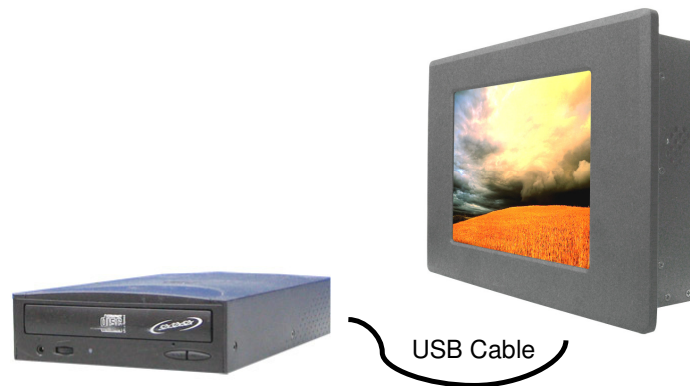

## 2-3 Driver Installation

The PPC comes with a User's Manual and Driver CD that contains most of the drivers and utilities of your needs.

1. Following the step by step to install Driver (Please refer I771 SBC User's Manual Chapter 3, 4, 5, 6) include: Chipset, VGA, Audio, and Ethernet.
2. Following the step by step to install the Touch screen if necessary (Please refer T series PPC User Guide Chapter 3).

## Chapter 3 Touch Driver Installation

### 3-1 Introduction

The PPC supports three kinds of Touch Panel Solutions: ELO AccuTouch touchscreen, Premier Touch system. Both of the touchscreen system consists of a touchscreen and an electronic touchscreen controller.

The IC70 series Panel PC's touch device is used RS232 interface touch controller card via *the COM2 port* inside Panel PC. When the touch driver installed either for ELO or Premier Touch systems, it will detect COM2 port automatically.

The ELO AccuTouch and Premier touchscreen is based on patented resistive technology. The touchscreen may be a flat, spherical, or cylindrical. It is installed over the face of the display. Since its shape matches of the display face, the touchscreen has excellent clarity and minimal parallax.

## 3-2 The ELO AccuTouch Driver Installation

ELO AccuTouch driver software provides a consistent software interface among all ELO AccuTouch touch screens and controllers.

Go to <http://www.elotouch.com/Support/dnld.asp> for a complete list of available drivers.

For Driver Installation, please install the “ELO Touch System Touch Tools CD” for Windows XP, Windows 2000, Windows Me, Windows 98, Windows 95, Windows NT, Windows CE 2.x, 3.0, 4.x, Windows XP Embedded, Windows 3.1, DOS, OS/2 Warp, and Apple Macintosh. Just follow the step by step to install the driver.

 
Choose “Auto-detect Elo devices ” in the first step. If not, the following step will need users choose COM2 port for detecting the devices.




### 3-2-1 Configuration Utility

After finishing the installation, please follow the steps to test the configuration utility.

Step.1 Enter “My Computer”, click the “Elo touchscreen” shortcut function.

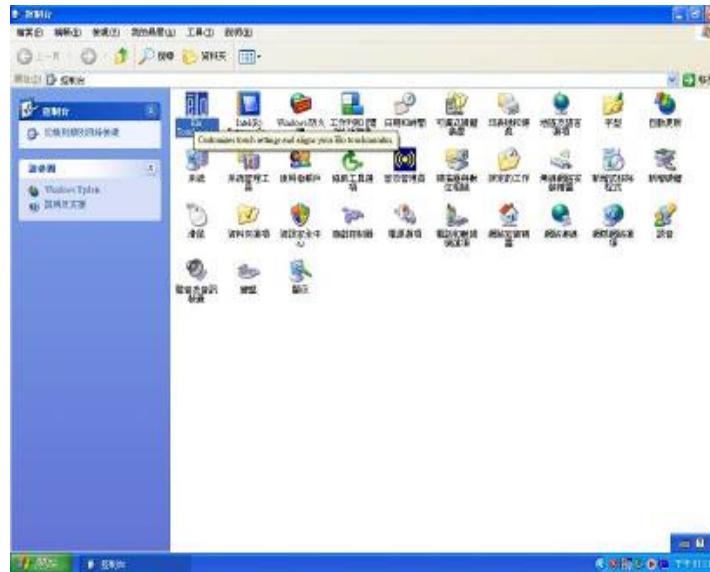


 Step.2 Click “Align” function key to go to next step.

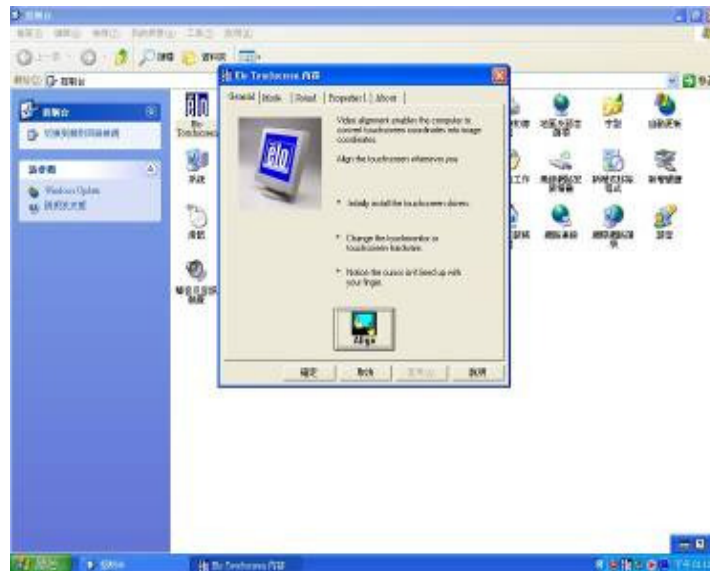



 Step.3 Correct 4 point locations on screen with the Panel PC. Screen display as follows.

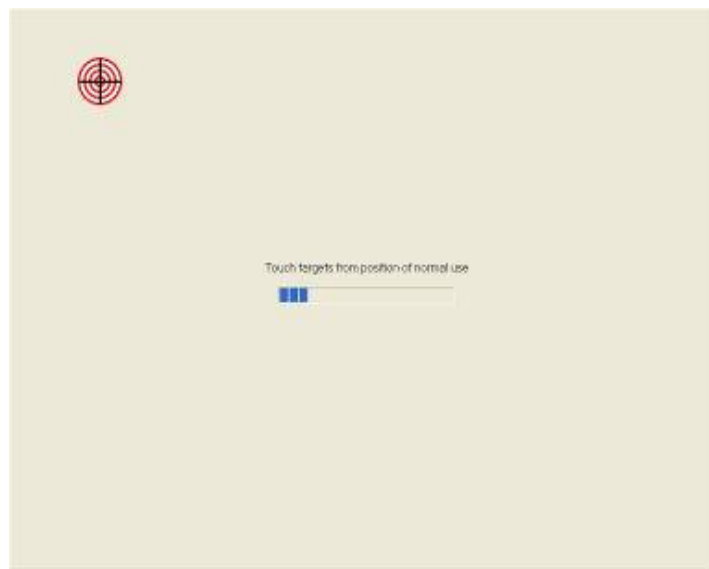

Step.4 Touch the “yes” function if the cursor follows your finger and finish the utility test.



### 3-3 The Premier Touch Driver Installation

TouchKit is the Premier Touch software, which contains drivers of the touch panel controllers for the specified communication connectors, RS232, PS/2 and USB, and the other two utilities.

The two utilities are as follows:

- Touch Tray support  
This is utility for emulating the right and left button of mouse through controlling touch panel. Users can toggle between right or left mouse buttons by this utility.
- Configuration support  
The calibration and draw test of touch panel are done by this utility. Besides, users can add or remove for new RS-232 or PS/2 touch panel devices.

 
Follow these steps to install TouchKit.

Step.1 Put the TouchKit CD to CD-ROM.

Step.2 Open the Win2000\_XP directory.

Step.3 Double click the Setup.exe, then windows starts to run the installation program. Notice that does not plug the USB controller on the system before the installation has been finished.

Step.4 Click Next to continue installation. And it will auto-detect touch devices in COM1 port at your Panel PC.

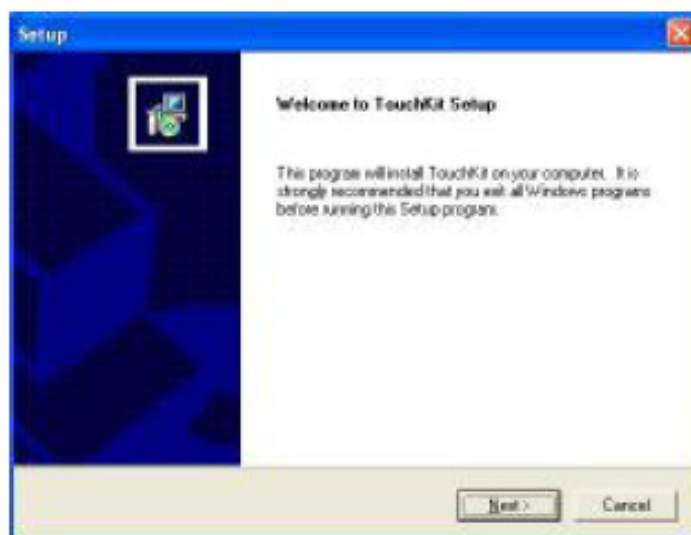

Step.5 Following the step by step to finish the driver installation.


### 3-3-1 Configuration Utility

 After finishing the installation, please follow the steps to test the configuration utility.

Step.1 Click the “TouchKit” shortcut function in the desktop.




Step.2 Enter “General” function and choose the language you need.  
Then go to next step.

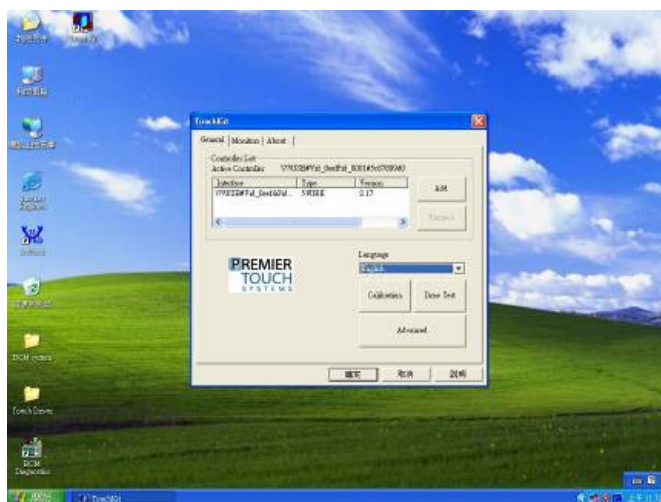

Step.3 Correct 4 point locations on screen with the Panel. Screen display as follows



 Step.4 Play “Yes” to continue if 4 points calibration test is fine and finish the test.

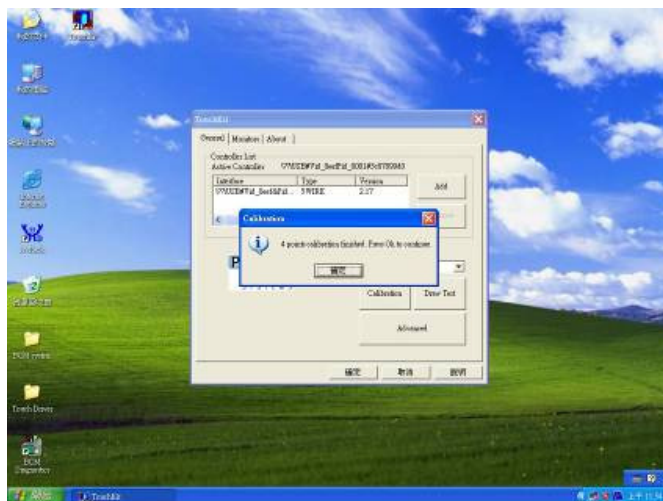


## Chapter 4 IC70 series Panel PC Mounting Guide


The Panel PC is suitable for most of the industrial/commercial application, by any kind of mounting approach. Three main mounting approaches, such as Panel Mount / Chassis / Open Frame, are very easy for user to install the Panel PC. As the pictures guided:

### 4-1 Open Frame Panel PC:

 
- Panel is aligned with the same height of the front of open frame metal housing
- Customers can fix our Panel PC with their own front bezel.
- VESA mount holes are also available for mounting from back side.

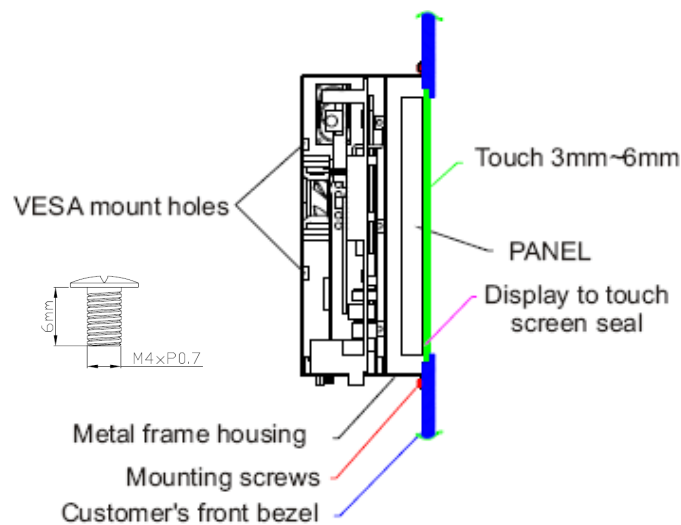

SIDE VIEW

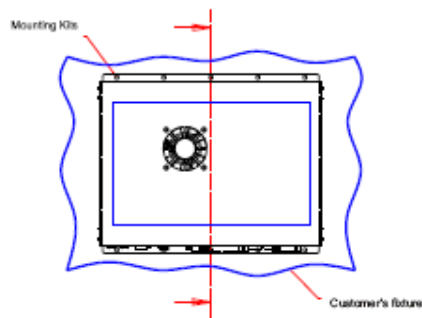 


REAR VIEW

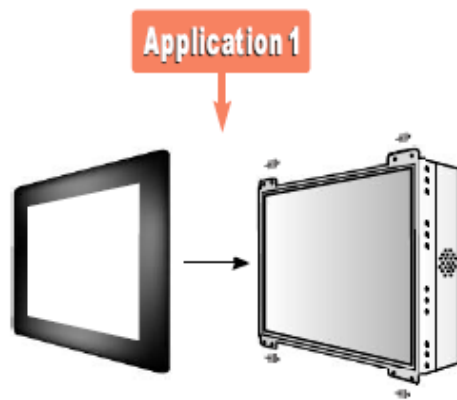 


**PANEL MOUNT**

 -mount with front bezel and then mounted into customer's panel.

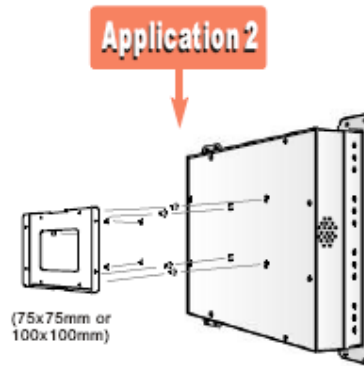


**WALL MOUNTING**

 -mount with VESA mount kits and then mounted into wall.

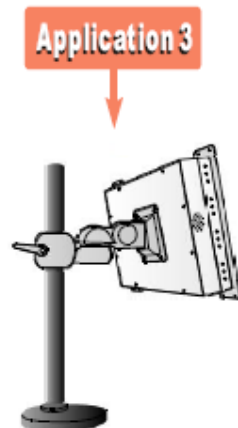

**ARM MOUNTING**

 -mount with VESA mount kit and then mounted with swimming arms.

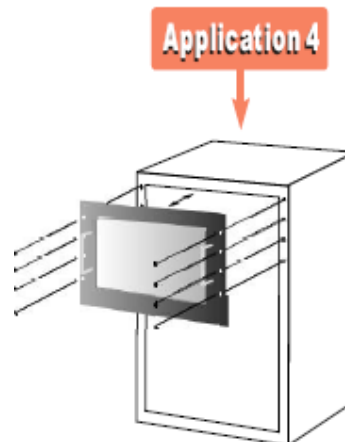


**RACK MOUNTING**




-mount with rack front bezel and then mounted into racks.

Panel PC size	VESA Mount Dimension
15"	75 x 75 mm / 100 x 100 mm
17"	75 x 75 mm / 100 x 100 mm
19"	75 x 75 mm / 100 x 100 mm

#### 4-2 5mm Panel Mount Panel PC:

    - Panel is aligned with the same height of the front of open frame metal housing.
- Touch/Glass is higher than Open frame metal housing.
- Customers can fix our Panel PC with their fixture (max.12mm)
- VESA mount holes are also available for mounting from back side.


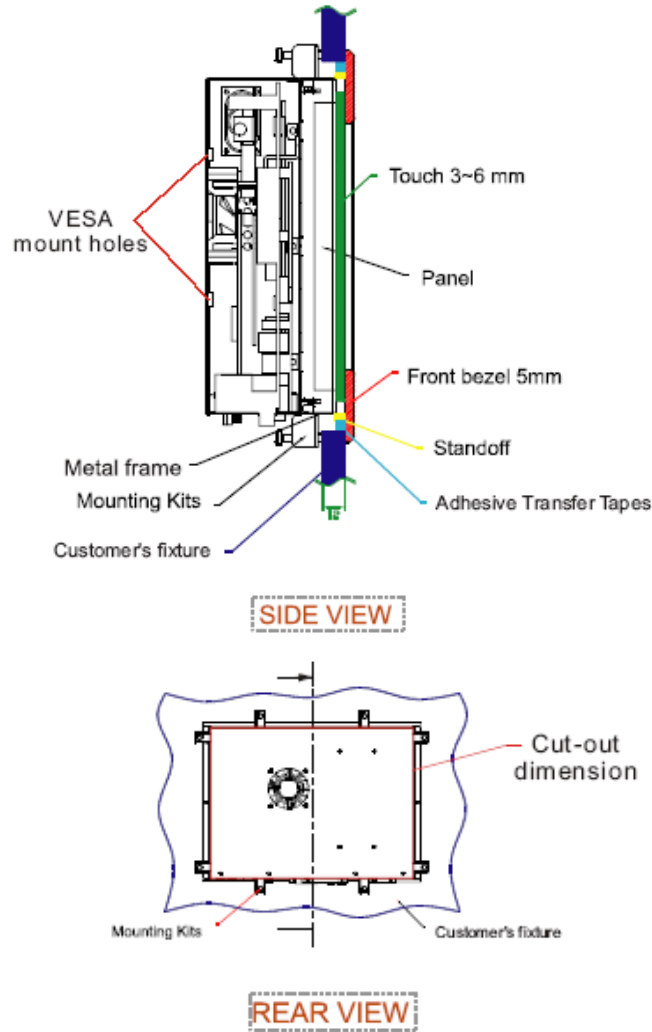


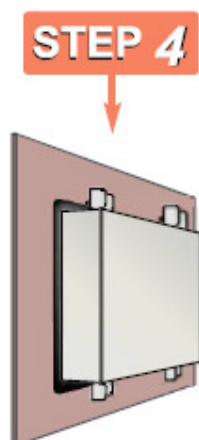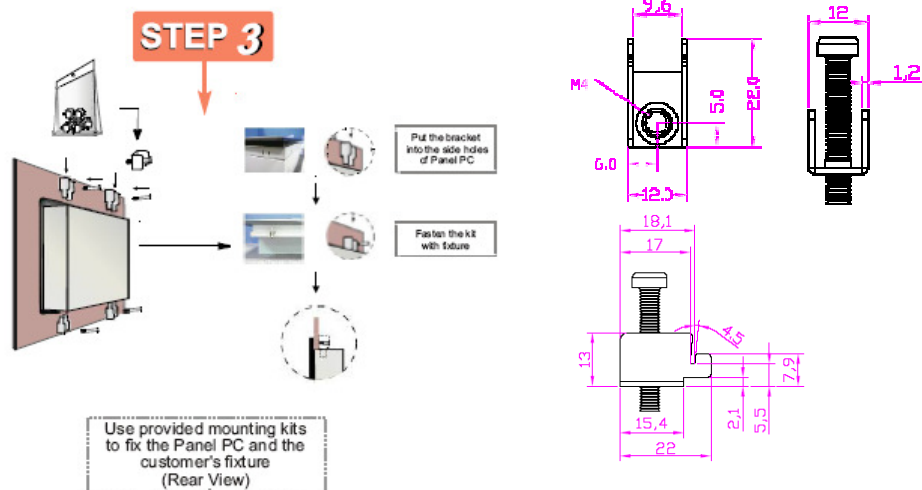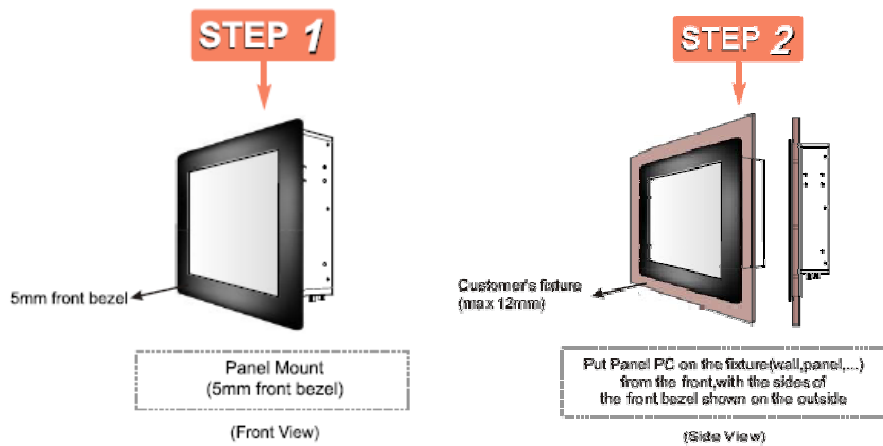




#### 4-3 10mm IP65 Panel PC

   - Touch/Glass is aligned with the same height of the front of open frame metal housing
- Customers can fix our Panel PC with their fixture by M3 screws.
- VESA mount holes are also available for mounting from back side.

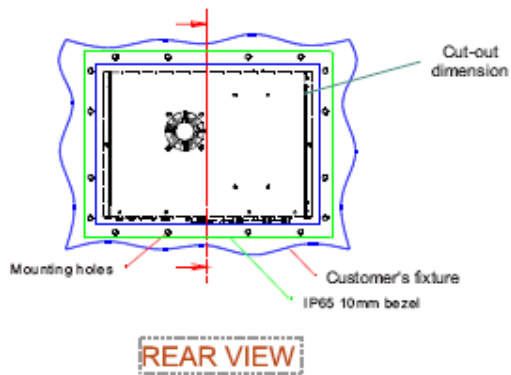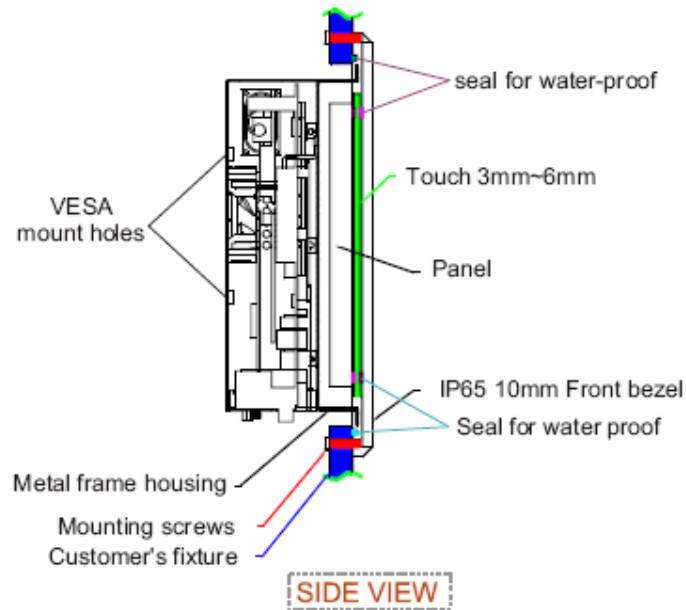


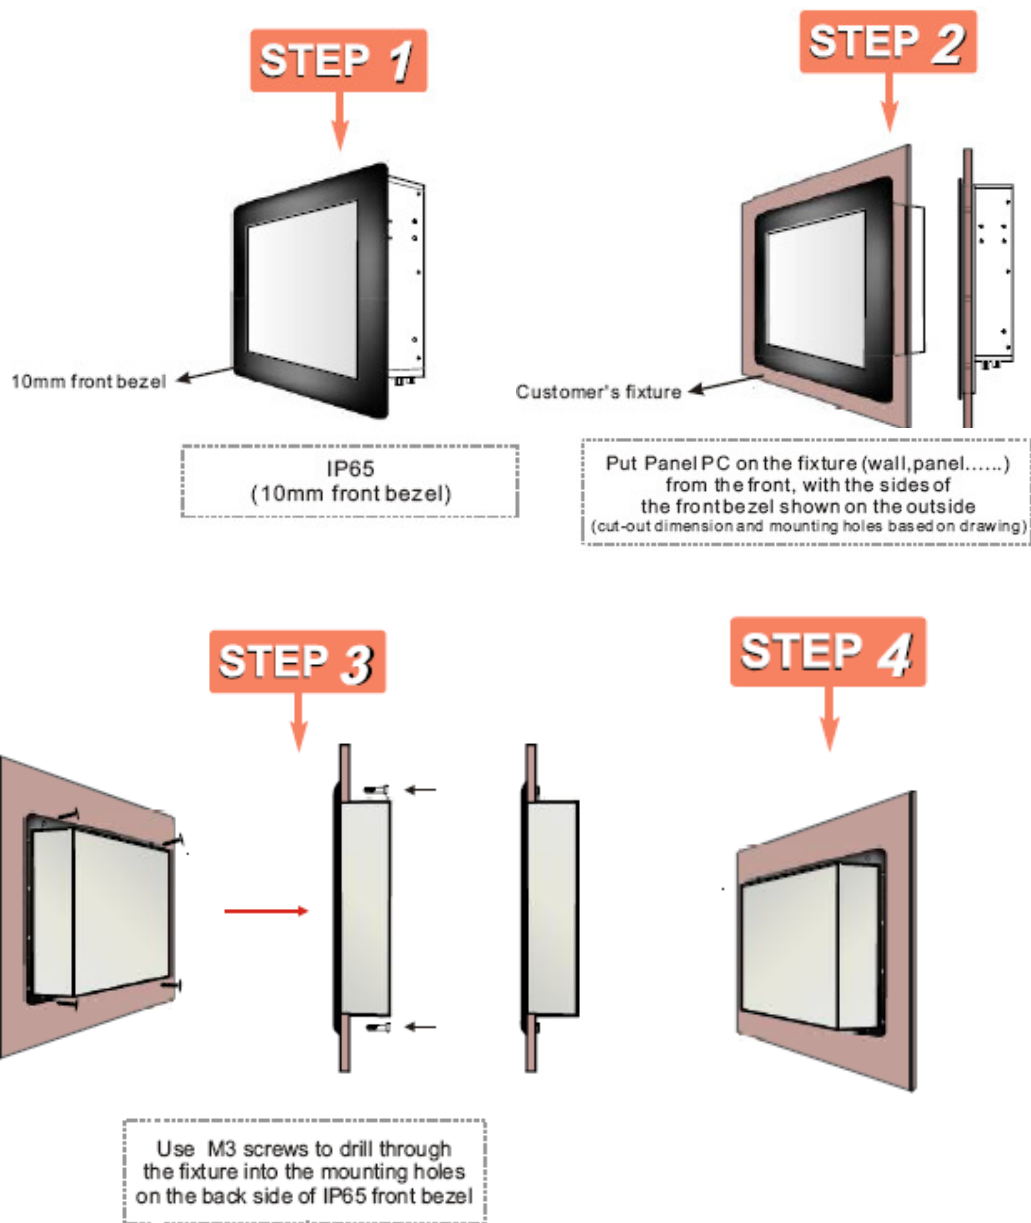

## 4-4 Chassis Panel PC

Fix the Panel PC with four screws (standard VESA), and fasten to the wall with other four screws.

 - 100 x 100 mm
- 75 x 75 mm

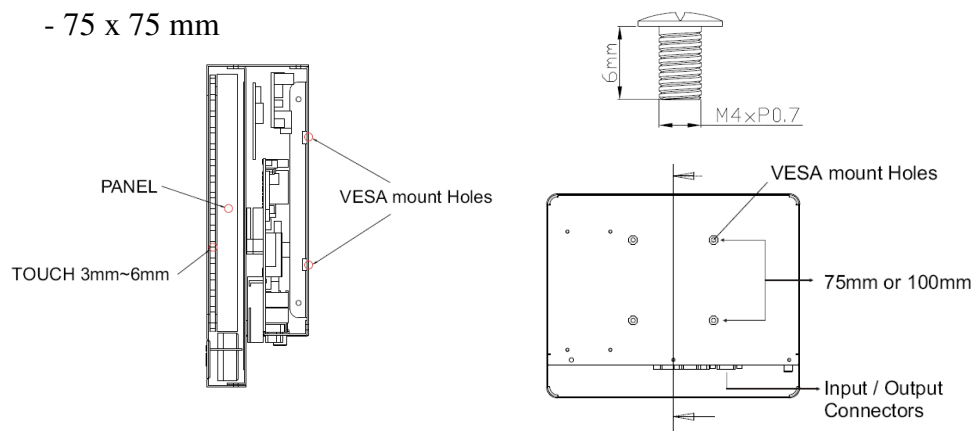


SIDE VIEW

REAR VIEW


### Application 1
 
### Application 2

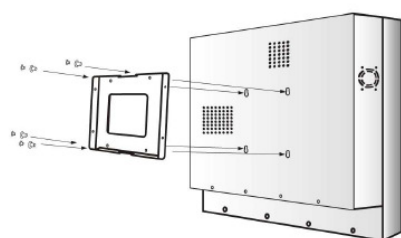

WALL MOUNTING

 -mount with VESA mount kits and then mounted into wall.

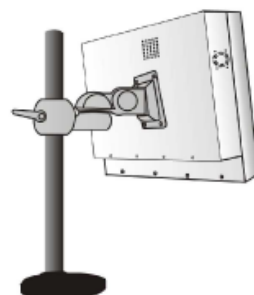

ARM MOUNTING

-mount with VESA mount kit and then mounted with swimming arms.

Panel PC size	VESA Mount Dimension
15"	75 x 75 mm / 100 x 100 mm
17"	75 x 75 mm / 100 x 100 mm
19"	75 x 75 mm / 100 x 100 mm